



AKRAPOVIC CARBON-FIBER PARTS
for the
KAWASAKI Z750 & Z1000 (2007-)

Congratulations on purchasing an Akrapovic carbon-fiber part. Please read these installation instructions carefully. If you have any trouble installing the part please contact your authorized dealer!

IMPORTANT INFORMATION

Exclusion of Certain Liability

1. The manufacturer, importer or dealer shall not be liable for any incidental damage including personal injury or any other damages caused by improper installation or operation of the Akrapovic carbon-fiber part.
2. Akrapovic makes no representation or warranties with regard to damage caused by the improper installation, use and maintenance of the Akrapovic carbon-fiber part. The warranty is limited to defects recognized by our technical department and to normal use. The guarantee is void in case of accident, modification, improper or competition use.
3. Do not attempt to install the Akrapovic carbon-fiber part on a motorcycle for which it was not made or tested by Akrapovic.
4. Technical specifications of Akrapovic carbon-fiber parts and related products subject to change without notice.

Trademarks

The Akrapovic Exhaust System Technology logo is a registered trademark of Akrapovic d.d.

Akrapovic website

Information about Akrapovic exhaust systems and related products is available on the Akrapovic website at:
<http://www.akrapovic-exhaust.net/>

Copyright

No part of the Akrapovic carbon-fiber part or its documentation may be reproduced or distributed in any form or by any means without the prior written authorization of the Akrapovic company.

© Akrapovic, d.d. All rights reserved.

Symbols


The following symbols are used throughout these installation instructions:





INSTALLATION INSTRUCTIONS

THESE INSTALLATION INSTRUCTIONS MUST BE READ CAREFULLY IN ORDER TO ENSURE PROPER INSTALLATION AND OPERATION OF THE AKRAPOVIC CARBON-FIBER PART.

 BEFORE INSTALLING CHECK SCHEMATIC OF THE CARBON-FIBER PART!

 IF ANY ITEMS IN THE AKRAPOVIC CARBON-FIBER PART PACKAGE ARE MISSING PLEASE CONTACT YOUR AUTHORIZED DEALER. KEEP THE SCHEMATIC FOR FUTURE REFERENCE.

 THE MOTORCYCLE CAN BECOME EXTREMELY HOT WHEN RUNNING. ALLOW THE MOTORCYCLE TO COOL DOWN BEFORE BEGINNING INSTALLATION.

 DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN AKRAPOVIC CARBON-FIBER PARTS.

 CARBON-FIBER PARTS MAY HAVE SHARP EDGES, POINTED SECTIONS AND SHARP CUTTINGS WHICH COULD DAMAGE YOUR SKIN AND/OR EYES.

 BEFORE INSTALLING MAKE SURE YOU ARE WEARING PROTECTIVE EQUIPMENT. RECOMMENDED: PROTECTIVE EYEWEAR AND GLOVES.

 DO NOT BEND CARBON-FIBER PARTS DURING INSTALLATION AND DO NOT USE FORCE: CARBON-FIBER PARTS CAN BE DAMAGED OR BREAK.

 USE ONLY PROFESSIONAL TOOLS DURING INSTALLATION.

 WE ADVISE YOU TO LEAVE INSTALLATION TO A QUALIFIED SERVICEMAN. IMPROPER INSTALLATION MAY RESULT IN A SHORTER LIFETIME OF THE CARBON-FIBER PART AND/OR DAMAGE TO THE MOTORCYCLE.



Combination 10mm wrench
T-handle 4mm three hexagon key wrench
T-handle 5mm three hexagon key wrench

1. INSTALLATION OF THE AKRAPOVIC CARBON-FIBER FOOT-SHEALDS:

1. Make sure that the engine and the heated parts of the bike are cold before carrying out the following instructions.
2. Position the motorcycle on a side stand (**we recommend a racing stand**). Make sure, that surface is solid and flat.
3. Unscrew and remove stock foot-shealDs on both sides of motorcycle (**Figure 1, 2**).

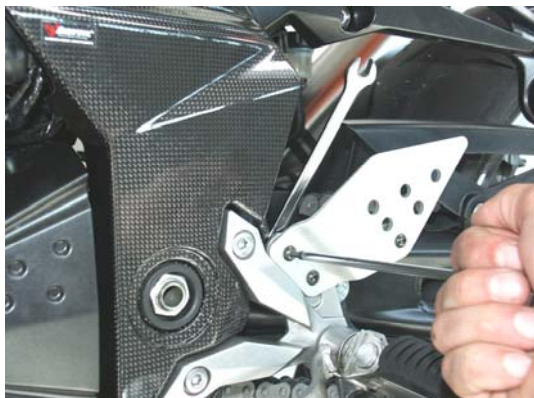


Figure 1



Figure 2

4. Position the Akrapovic carbon-fiber footshields on the motorcycle, using stock bolts (**Figure 3, 4**).

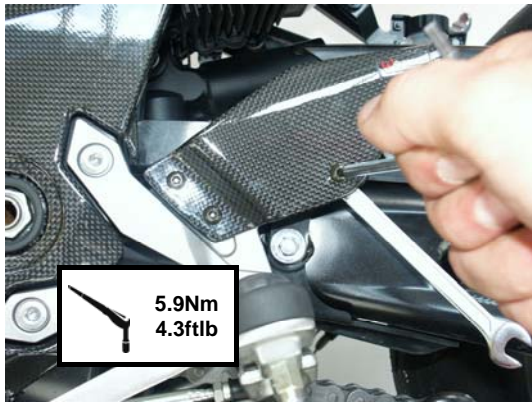


Figure 3



Figure 4

2. INSTALLATION OF THE AKRAPOVIC CARBON-FIBER UPPER & LOWER FRAME COVERS:

1. Make sure that the engine and the heated parts of the bike are cold before carrying out the following instructions.
2. Position the motorcycle on a side stand (**we recommend a racing stand**). Make sure, that surface is solid and flat.
3. Remove the upper and lower stock frame covers on both sides of the motorcycle (**Figure 1, 2**).



Figure 1



Figure 2



Figure 3

4. Reposition the stock rubber mounts **A** and **B** to Akrapovic carbon-fiber lower frame covers (Figure 4, 5, 6, 7).

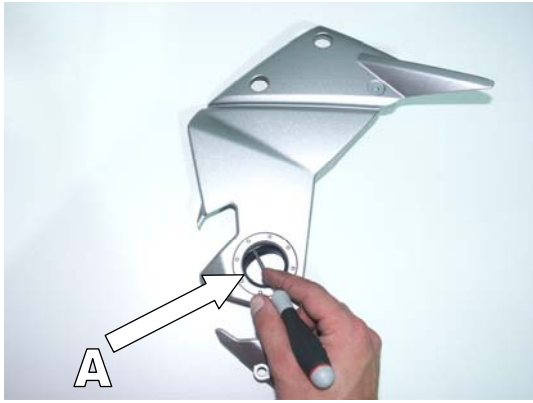


Figure 4

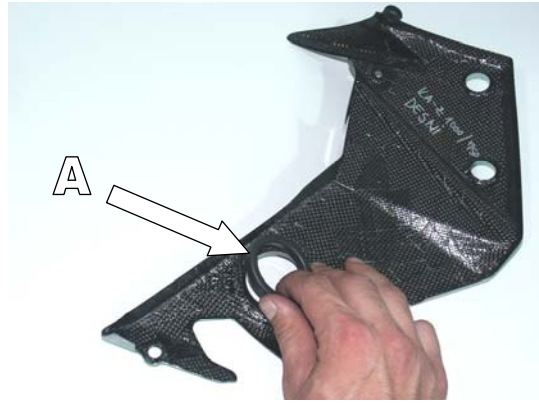


Figure 5

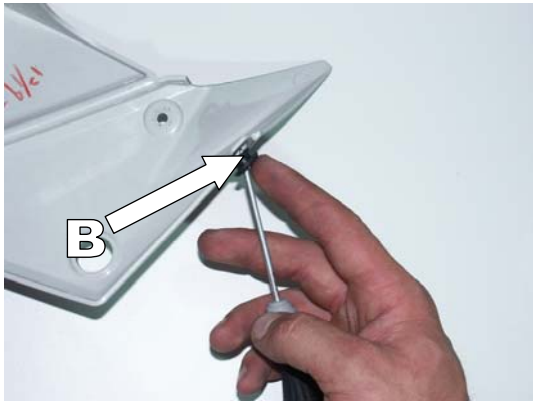


Figure 6

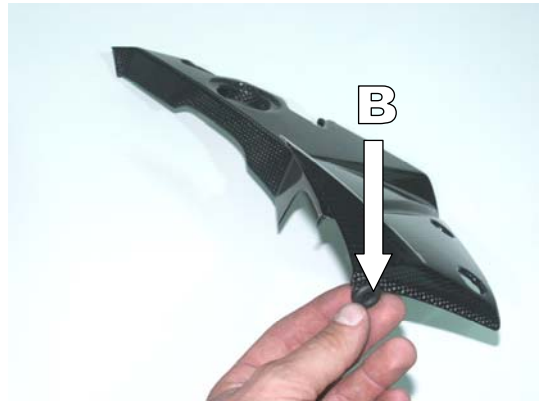


Figure 7

5. Remount the Akrapovic lower and upper carbon-fiber frame covers in the reverse order from the order in which they were removed (Figure 8, 9, 10).



Figure 8

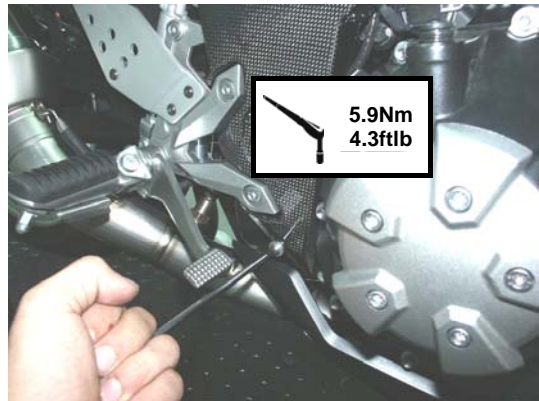


Figure 9



Figure 10

3. FOR KAWASAKI Z1000 2007- ONLY! INSTALLATION OF THE AKRAPOVIC CARBON-FIBER ENGINE SPOILERS :

1. Make sure that the engine and the heated parts of the bike are cold before carrying out the following instructions.
2. Position the motorcycle on a side stand (**we recommend a racing stand**). Make sure, that surface is solid and flat.
3. Unscrew and remove stock engine spoilers on both sides of the motorcycle (**Figure 1, 2**).



Figure 1



Figure 2

4. Reposition **collars A** and **rubber mounts B** (**Figure 3**) from stock spoilers to Akrapovic carbon fiber spoilers (**Figure 4, 5**).

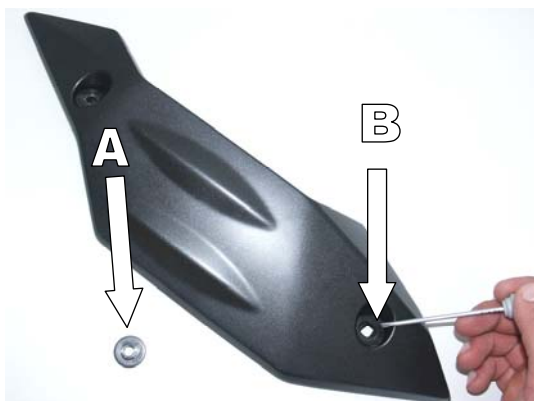


Figure 3

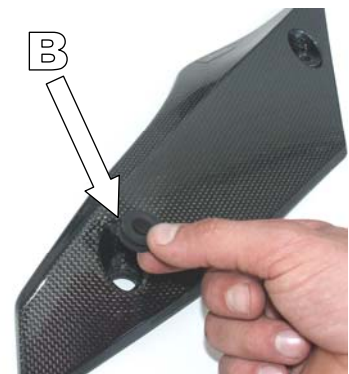


Figure 4

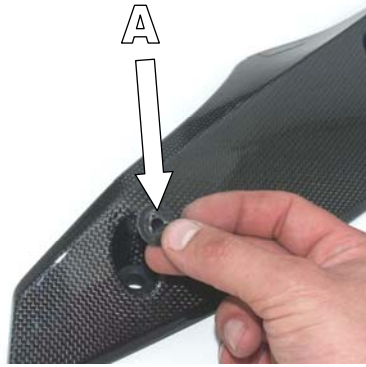


Figure 5

5. Attach the Akrapovic carbon-fiber engine spoilers on both sides of the motorcycle using stock bolts (**Figure 6, 7**).



Figure 6

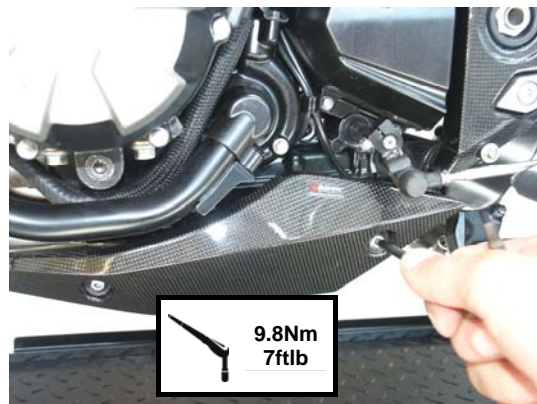


Figure 7

FINAL INSTALLATION

1. Check the positioning of the Akrapovic carbon-fiber parts.
2. Tighten nuts, bolts and mounting elements completely to the same torque tolerances as the stock hardware. Do not overtighten, since this can lead to damage to the nut/bolt or carbon-fiber part.
3. Schematic of the installed Akrapovic carbon-fiber parts (**Figure 8**).

MAINTENANCE OF THE AKRAPOVIC CARBON-FIBER PART

General:

- Periodically ensure that all nuts and bolts are sufficiently tight.
- Cleaning: use a soft dry cloth.

KAWASAKI Z750 / Z1000 2007 CARBON PARTS



Akrapovic CARBON PARTS for those who desire higher performance, better looks and lower weight. The story continues in carbon fiber.

CARBON FRAME COVER LOWER - RIGHT
Part Num: 01-05-10-0001

CARBON FRAME COVER UPPER - RIGHT
Part Num: 01-05-10-0003

CARBON ENGINE SPOILER - RIGHT
Z1000 only
Part Num: 01-05-14-0001

CARBON FOOT SHIELD - RIGHT
Part Num: 01-05-06-0001

CARBON FRAME COVER UPPER - LEFT
Part Num: 01-05-10-0004

CARBON FRAME COVER LOWER - LEFT
Part Num: 01-05-10-0002

CARBON ENGINE SPOILER - LEFT
Z1000 only
Part Num: 01-05-14-0002

CARBON FOOT SHIELD - LEFT
Part Num: 01-05-06-0002